



Installation Instructions

Complete set active Sound incl. Soundbooster

Ford Mondeo MK5

v1.1 (24.05.2017)

Contents

1	Liability Exclusion	3
2	Copy Right	4
3	General Notes	4
4	Safety instructions	5
5	Requirements for the determinable operation	5
6	Note	5
7	How to connect a cable to another	6
8	Note Cable Inscription/Color	7
9	Assembly Instructions	8
10	Removing front trim panel driver's side	9
11	Connection ignition lead / ground / CAN High & CAN Low	10
12	Removing rear trim panel	11
13	Removing rear lights / rear bumper	12
14	Removing rear bumper	13
15	Routing connecting cable sound generator	14
16	Installation sound generator	15
17	Important Information Sound Booster	16

1 Liability Exclusion

Dear Customer

Our cable sets are developed according to the connection- and circuit diagrams of the corresponding car manufacturer. Before the original production the cable sets will be tested on an original car. Therefore, the integration into the car electronics will be executed according to the instructions of the manufacturer. Regarding the necessary pre-understanding and the accuracy of the presentation of texts and pictures our mounting guidelines correspond to the usual ones in car technology and car electronics. Practically, they have been proved one's worth a hundred times.

However, should there be any difficulties during the installation of our products we will be at your disposal any time for support by phone or by mail. Moreover, we offer you to execute the installation at our works in Bad Segeberg.

Costs which may arise because a third person will execute the installation of our products will not be supported by us in any case. Only if there is a mistake caused by our product we will pay the proved costs of the installation as well as the costs of the removal of the defective product. The refund of expenses will be limited to gross EUR 110,- ; we reserve the right to check the described mistake in our works in Bad Segeberg. In case of a proved reclamation the costs for dispatch for the check in our factory will be transferred to you.

According to our experience each specific factory which has the necessary diagnostic device, diagnostic software and the circuit diagrams of the manufacturer can find possible mistakes at our products within a short time. So the installation and removal including diagnostic inspection can be realised in at most 60 minutes.

We also made the experience that many specific factories cannot work with the circuit diagrams of the manufacturer, and that they cannot read usual wiring diagrams. Therefore, very easy installation works will take many hours. You will understand that we neither take the risk to find a reliable specific factory nor the financing of the training of the staff of your favoured factory.

Costs which will arise because you buy missing parts or spare parts at other suppliers will be refunded by us up to the amount of the costs which had been arisen by additional supply (saved expenses). In this case, there would be no right for refund according to the legal guarantee right as long as we have no deadline for supplementary performance or a deadline for supplementary performance has not expired.

So if you have any problems with the installation or operation of one of our products please call us, send us an email, send us the product or take your car to our factory in Bad Segeberg. We are sure to find an appropriate solution for each concern.

With best regards
Your Kufatec GmbH & Co. KG Team

2 Copy Right

Our installation- and removal instructions, installation plans, software and other documentation with texts or pictures are protected by copy right.

A publication or distribution of these documents is only permitted with a written approval of Kufatec GmbH & Co. KG.

3 General Notes

Regarding the development there has especially been paid attention to your personal safety together with the most possible operating comfort, modern design and actual product technologies.

Despite most possible accuracy in case of incorrect installation or use or in case of incorrect operating, it is possible that injuries or damages of property may arise.

Therefore, please read the operating instructions you have received carefully and completely, and keep it with you.

All articles of our production will be checked at 100% — for your safety.

We reserve the right to make technical changes which serve the progress at any time.

Before the installation or startup it may be necessary, depending on the article and purpose of use, to check the legal instructions of each country.

In case of warranty claim the device has to be sent to the seller originally packed together with the sales receipt and a detailed description of the mistake. Please consider the manufacturer's instructions for return (RMA). The legal warranty instructions are valid.

The warranty claim and also the permission for startup will expire in case of:

- unauthorised changes on the device or the accessories which have not been executed or approved by the manufacturer or its partners
- opening of the box
- repair of the device on your own
- incorrect use / no normal use / startup
- influence of force on the device (falling down, wilful damage, accident, etc.)

During the installation please consider all safety and legal instructions. The device may only be installed by trained qualified personnel or persons who are similar qualified.

In case of installation- or function problems please reduce the search of the mistake to approx. 0,5 hours for mechanical works or 1,0 hours for electronic works.

To avoid unnecessary additional work and expenses, please send immediately an inquiry to our technical support with the Kufatec contact form (<http://www.kufatec.de/shop/de/infocenter/>)

Please absolutely mention the following:

- car chassis number
- part number of the add-on kit
- exact description of the problem
- work steps already made

4 Safety instructions

The installation may only be executed by trained qualified personnel. Please execute the installations only in a condition of dead voltage. Here please separate for example the battery from the main power supply and consider the instructions of the car manufacturer.

- In order to not endanger your own driving safety please never use security relevant screws, bolts or other fixation pieces at steering, brake system or other components.
- Connect the device only at 12V wiring system voltage with ground connection to the autobody. This assembly is not allowed for the use in trucks or other cars with 24V wiring system voltage.
- Please avoid the installation of the device at positions where the driving safety or the functional efficiency of other subassembly integrated in the car are restricted.
- This module may only be used together with the following mentioned car types and models; the installation may be executed exclusively by use of the circuit points mentioned in the assembly instructions.
- Kufatec GmbH & Co. KG does not assume liability for damages which are caused by incorrect installation, the use of inapplicable circuit points or the installation into car types and -modules which are not foreseen.
- We would like to draw your attention to the fact that the module processes the data of the MOST-protocol of the car mentioned below. Therefore, during the installation of the module it will be used a model-specific complete system which we as the manufacturer of the mentioned construction line only know partly.
- Especially in case of changes within the same model line and the same year we therefore cannot guarantee the applicability of our construction line in each case. Kufatec GmbH & Co. KG does not assume liability for the applicability of our construction line with changes made by the manufacturer.
- Kufatec GmbH & Co. KG does not assume liability that the installation of the here described component has been permitted according to the guarantee instructions of particular car manufacturers. Therefore, please consider the guidelines for installation and guarantee conditions of your car manufacturer before installation.
- The manufacturer reserves the right to change components without giving reasons.
- Subject to errors and changes

5 Requirements for the determinable operation

Please use the device only in its the corresponding area.

In case of unprofessional and untypical use, installation or modification the permission for operation and the warranty claim will expire.

6 Note

Make sure that there's enough space at the described position. If there is no space please cancel the installation and contact our technical support.

The use of a sound booster is not permitted without registration in the vehicle papers, in the area of the german StVZO. The noise emission of the vehicle is increased by this retrofit. The regulations of the StVZO must be observed. It is therefore recommended to ask for a specific registration option at the responsible TÜV/DEKRA office before retrofitting. Outside Germany, please observe the laws on vehicle licensing applicable in your country.

7 How to connect a cable to another

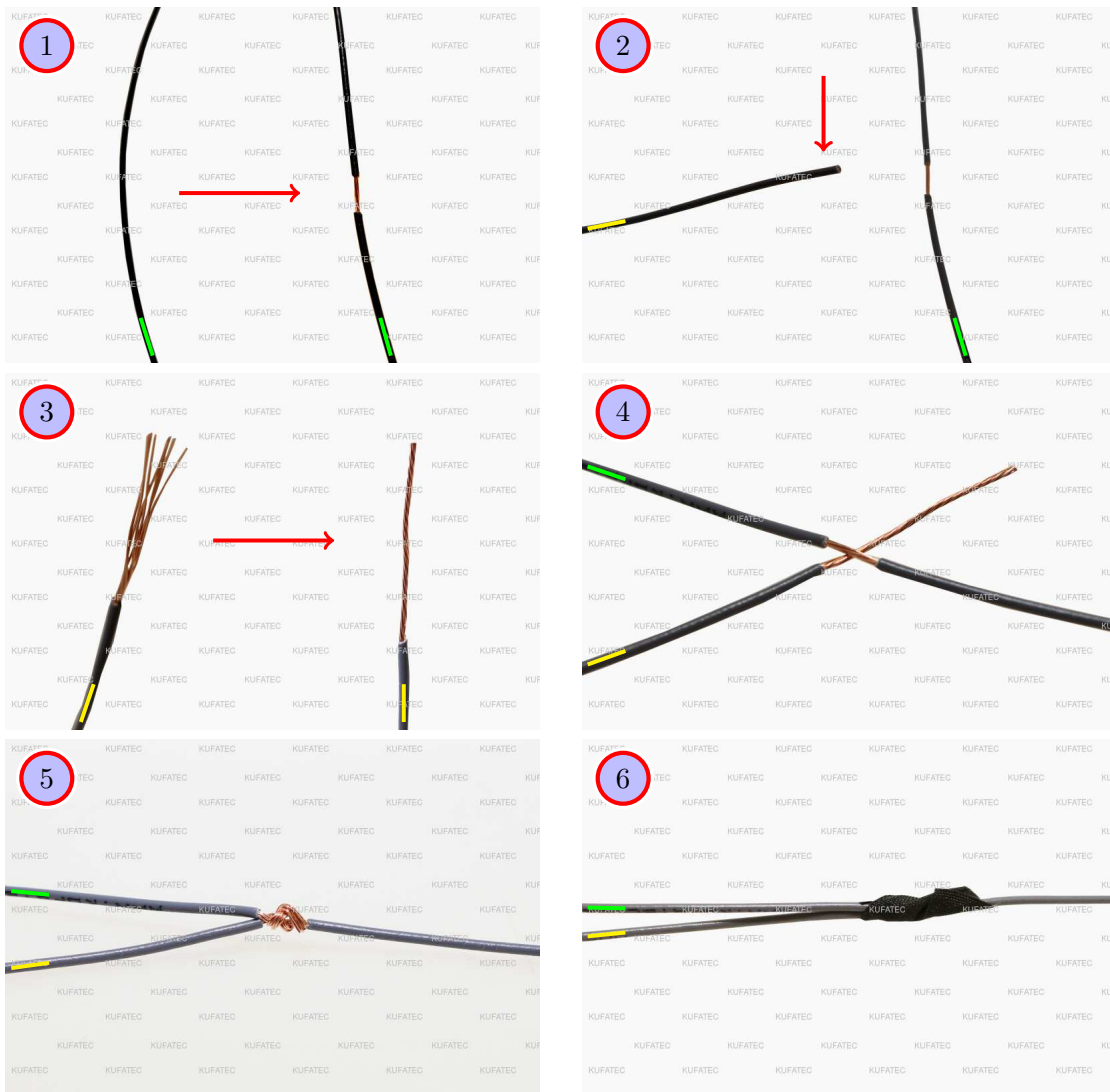


Figure 1: How to connect a cable to another

Table 1: How to connect a cable to another

No.	Work step	Note
1	Take the cable of the vehicle, to which you want to connect, (green marked here) and strip the insulation at one point with a suitable tool (cable stripper/cutter knife).	
2	Now take the cable of the cable set, which you want to connect, (yellow marked here) and strip the insulation at the end.	
3	Twirl the wires of the stripped cable together.	
4	Place the end of the cable you want to connect under the stripped point of the cable of the vehicle...	
5	... and wrap the cable you want to connect around the cable of the vehicle.	
6	Lastly, stick insulating tape around the connection point.	

8 Note Cable Inscription/Color



Figure 2: Cable Inscription

If our cable set consists exclusively of grey wires, connect the wires according to the cable inscription.

9 Assembly Instructions

The following illustration shows the cable routing as well as the position of the individual components.

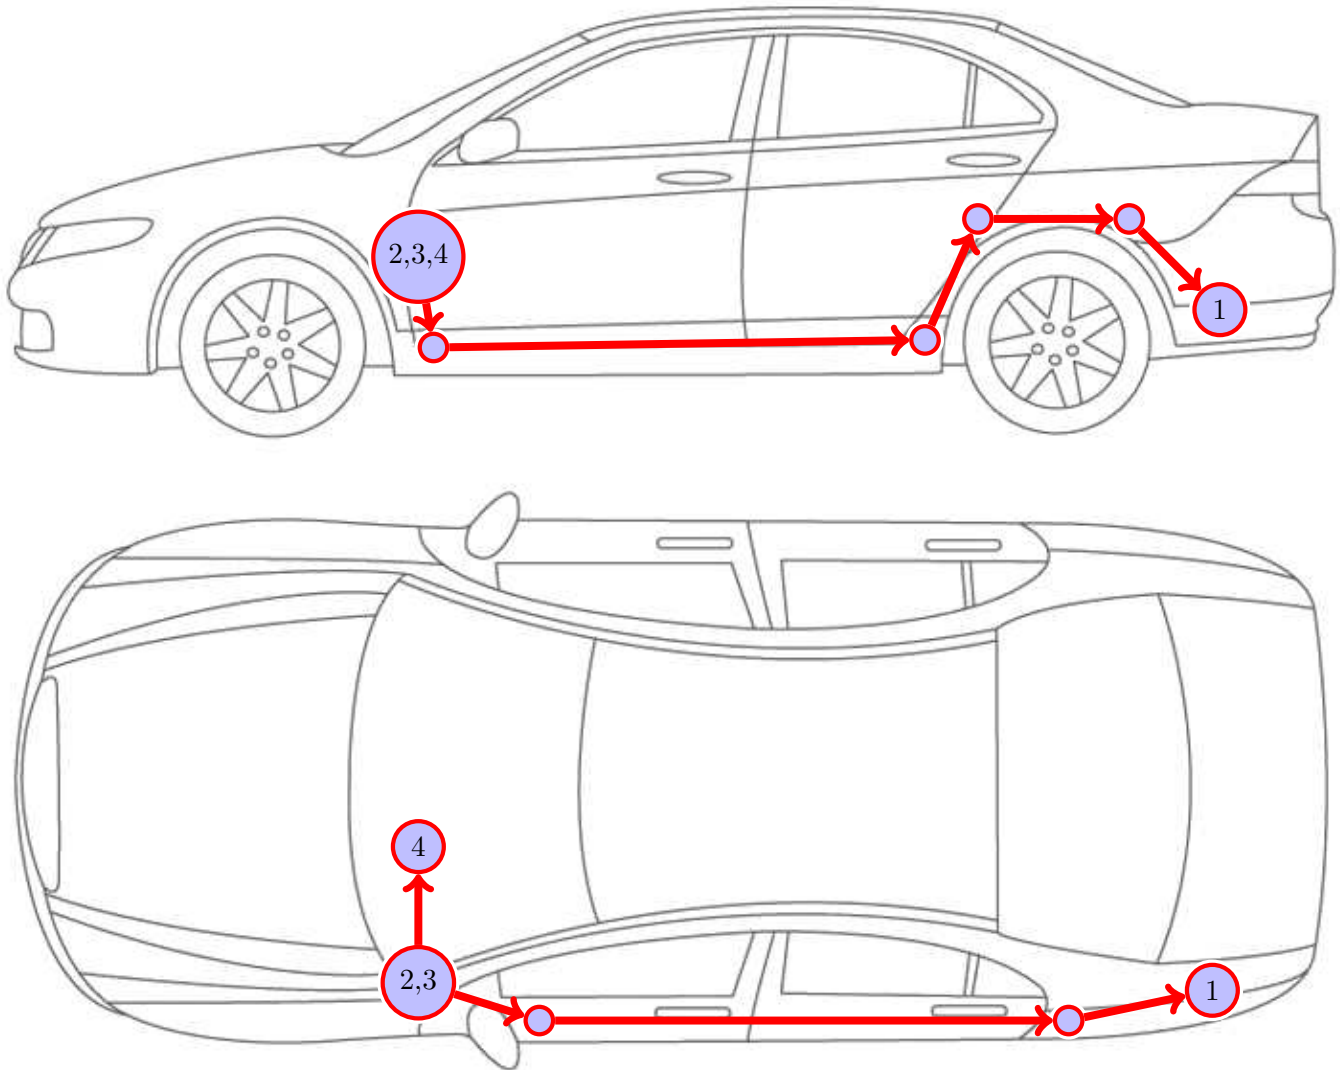


Figure 3: Vehicle overview

- 1 External sound generator incl. mounting plate
- 2 Control unit for engine sound generation
- 3 Sound Booster Pro (module)
- 4 Pushbutton

10 Removing front trim panel driver's side

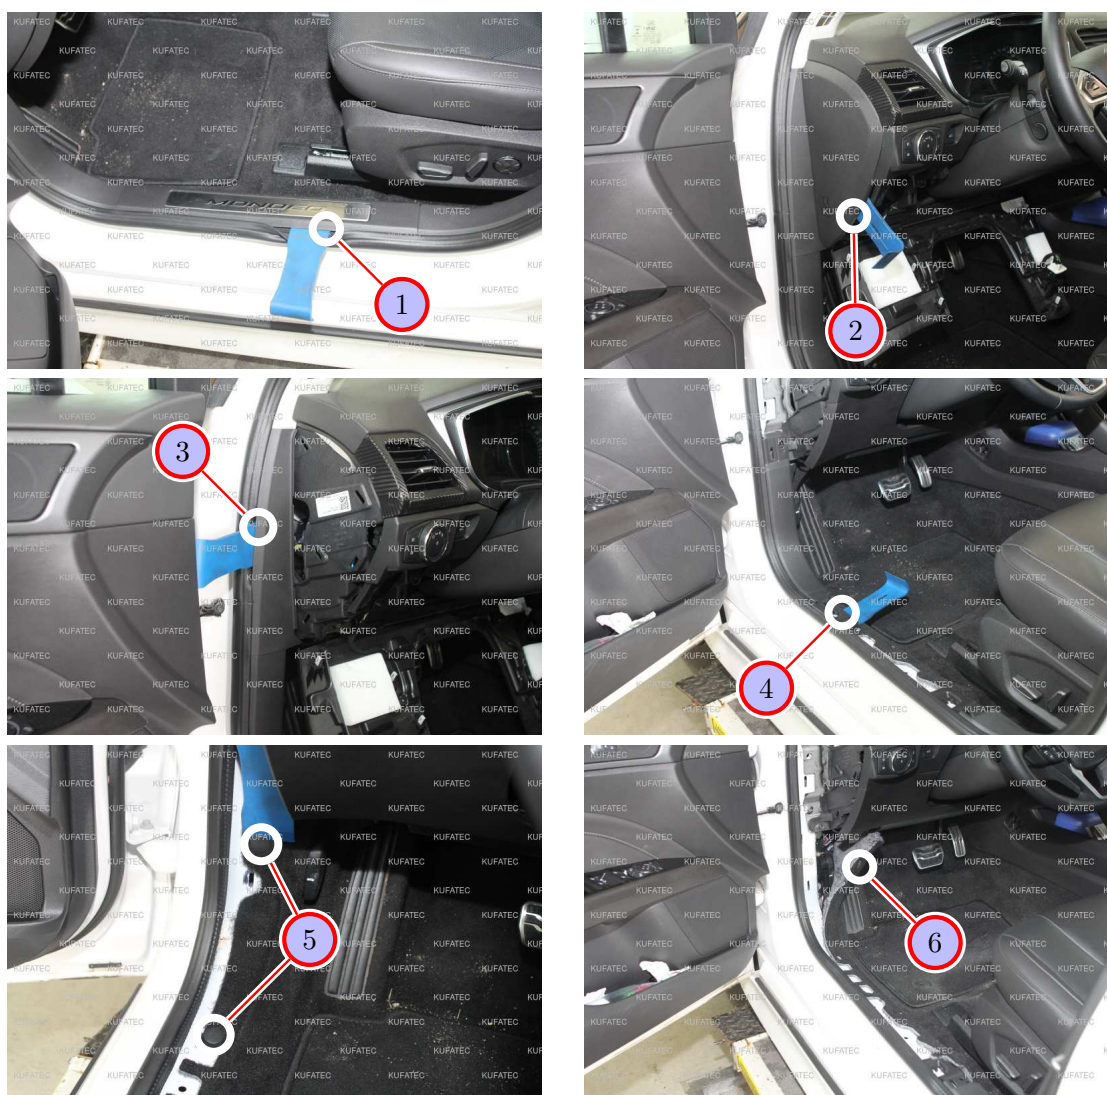


Figure 4: Removing front trim panel driver's side

Table 2: Removing front trim panel driver's side - instructions

Nr.	Work step	Note
1	Remove the sill trim using a trim tool.	
2	Loosen the lateral trim panel of the dashboard with a trim tool.	
3	Remove the upper trim panel of the a-pillar with a trim tool.	
4	Now loosen the lower trim panel of the a-pillar with a trim tool.	
5	Remove the two marked plastic clips from the carpet.	
6	Afterwards fold the carpet sideward.	

11 Connection ignition lead / ground / CAN High & CAN Low

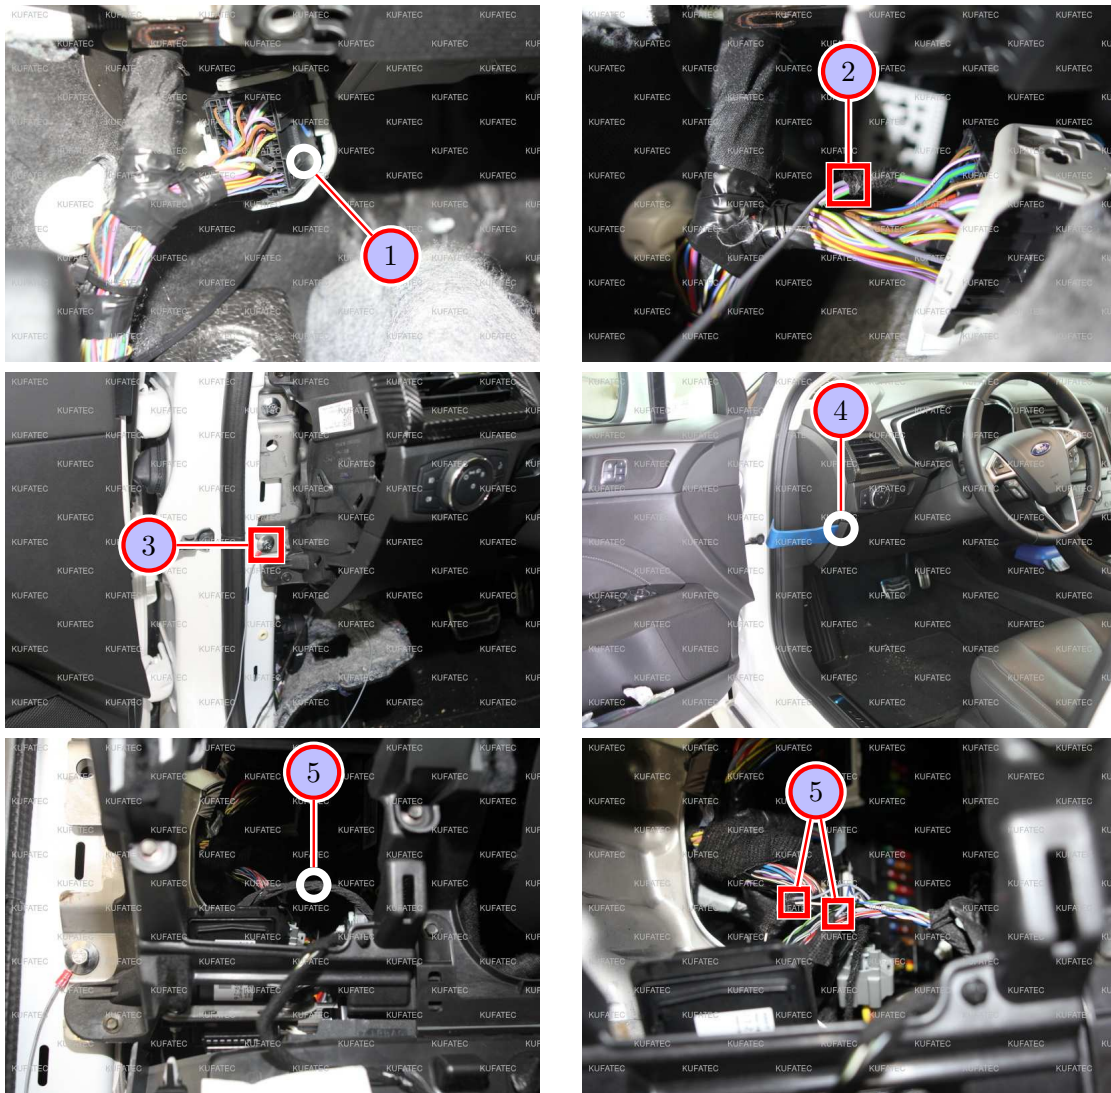


Figure 5: Connection ignition lead / ground / CAN High & CAN Low

Table 3: Connection ignition lead / ground / CAN High & CAN Low - instructions

Nr.	Work step	Note
1	Remove the marked black plug from the interconnecting point.	
2	Now connect the cable for ignition lead (red/white) also to PIN 36 (green/violet = colour of the cable at the plug). (see notes page 6)	
3	Connect the ground cable (brown) to the marked screw at the a-pillar.	1x10er socket
4	Loosen the lower trim panel of the dashboard with a trim tool and fold it down.	
5	Connect CAN High & CAN Low to the marked cable of the OBD2-connector as follows:	
	- CAN High (black/white) to PIN 6 (blue)	
	- CAN Low (black/yellow) to PIN 14 (white)	
	If our cable set consists exclusively of grey wires, connect the cables according to the cable inscription at the end of the wires.	

12 Removing rear trim panel

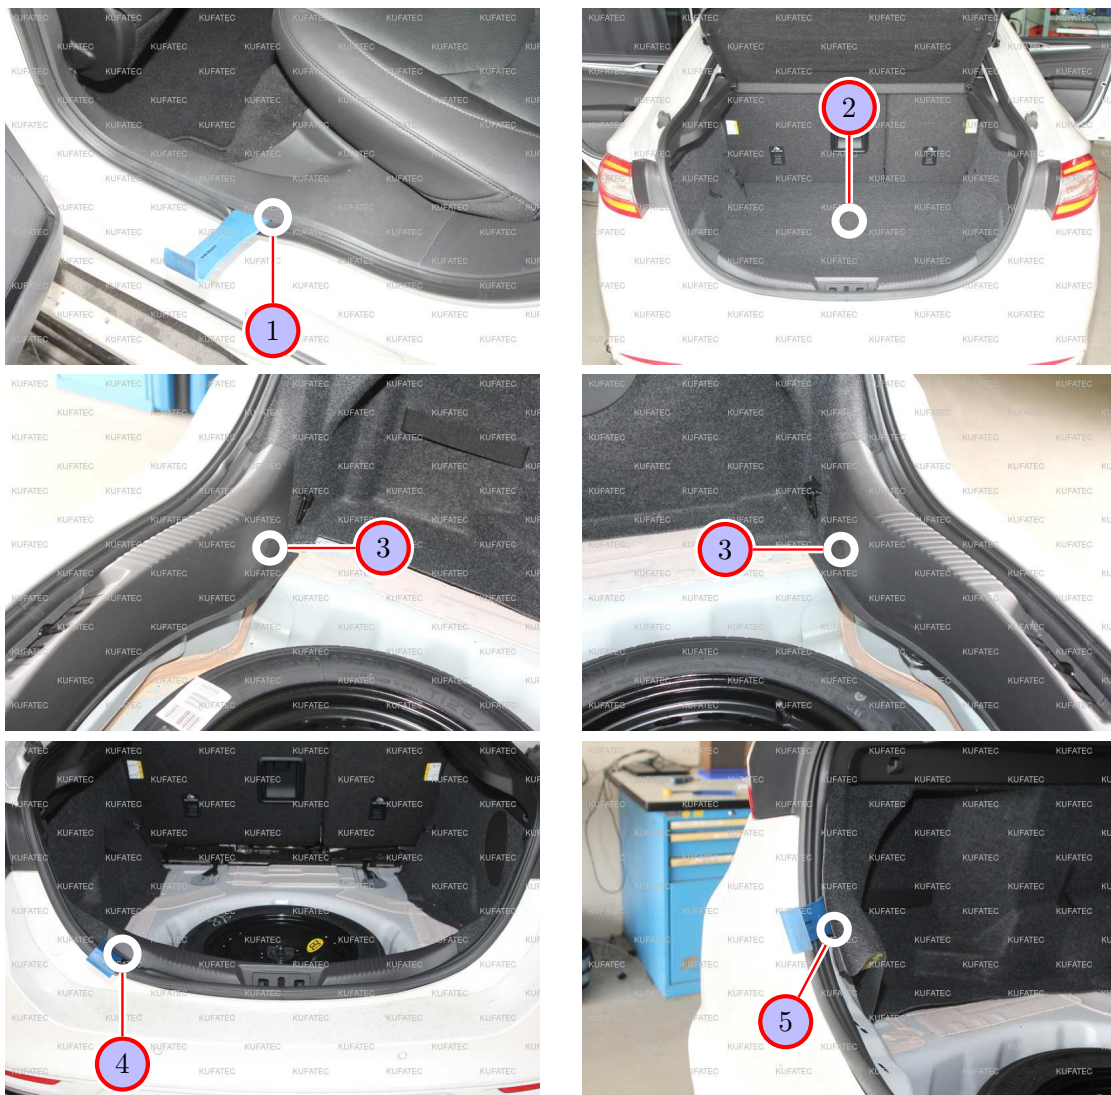


Figure 6: Removing rear trim panel

Table 4: Removing rear trim panel - instructions

Nr.	Work step	Note
1	Remove the rear sill trim on the driver's side using a trim tool.	
2	Take the trunk floor out.	
3	Loosen the two marked plastic clips of the trunk sill protection.	
4	Remove the trunk sill protection with a trim tool.	
5	Afterwards pull the covering on the left side in the trunk sideward.	

13 Removing rear lights / rear bumper

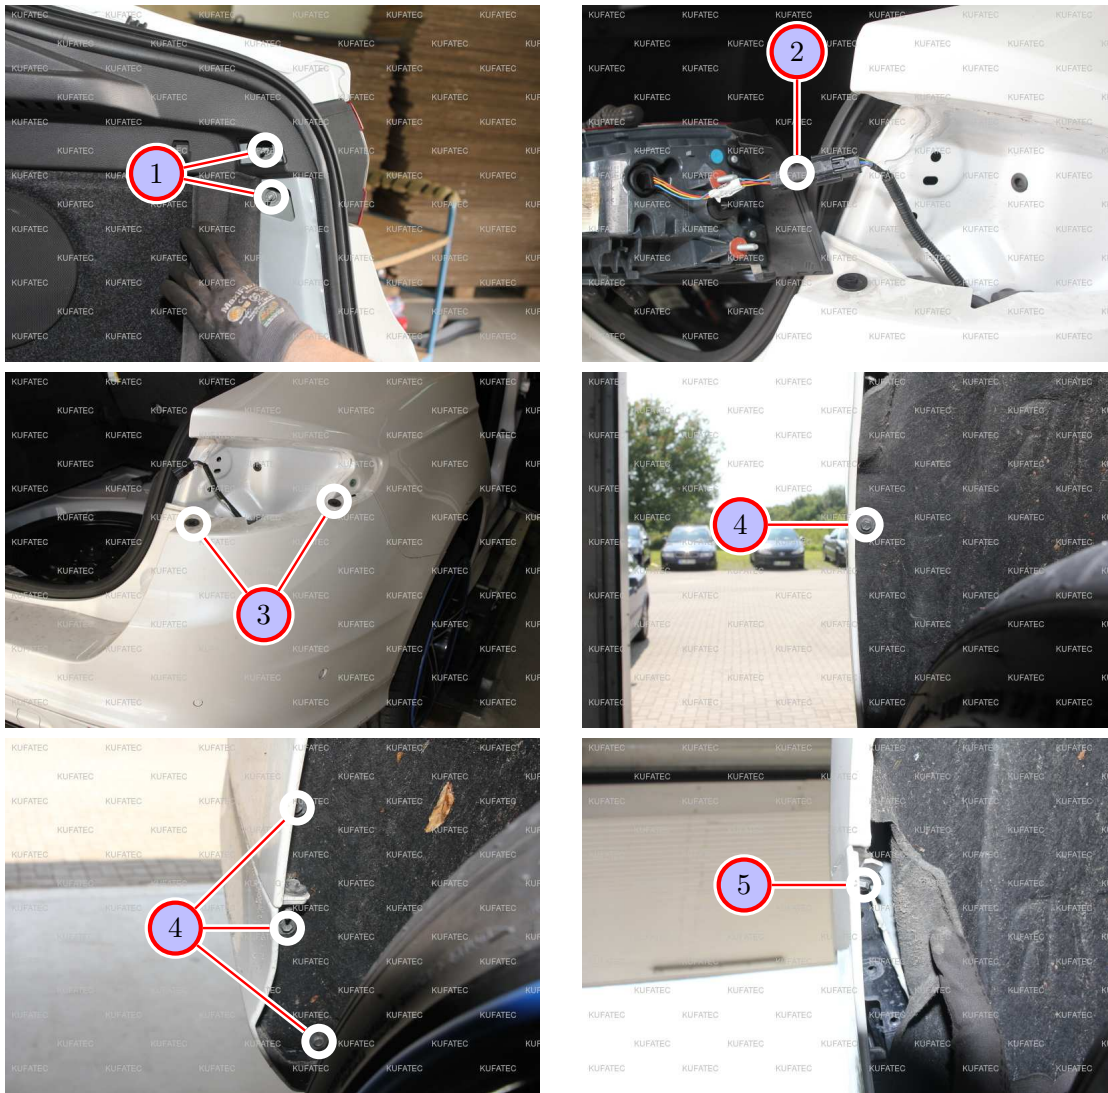


Figure 7: Removing rear lights / rear bumper

Table 5: Removing rear lights / rear bumper - instructions

Nr.	Work step	Note
1	Loosen the two marked screws of the rear light on the passenger's side.	2x10er socket
2	Loosen the rear light with a trim tool carefully, loosen the marked plug and take the rear light out completely.	
3	Remove the two marked plastic clips at the top of the bumper.	
4	Afterwards loosen the four marked screws of the rear bumper in the wheel housing of the passenger's side.	4x7er socket
5	Fold the covering in the wheel housing at the top sideward and loosen the screw of the bumper, which is located behind.	1x7er socket
6	Repeat the steps 1-5 on the driver's side.	

14 Removing rear bumper

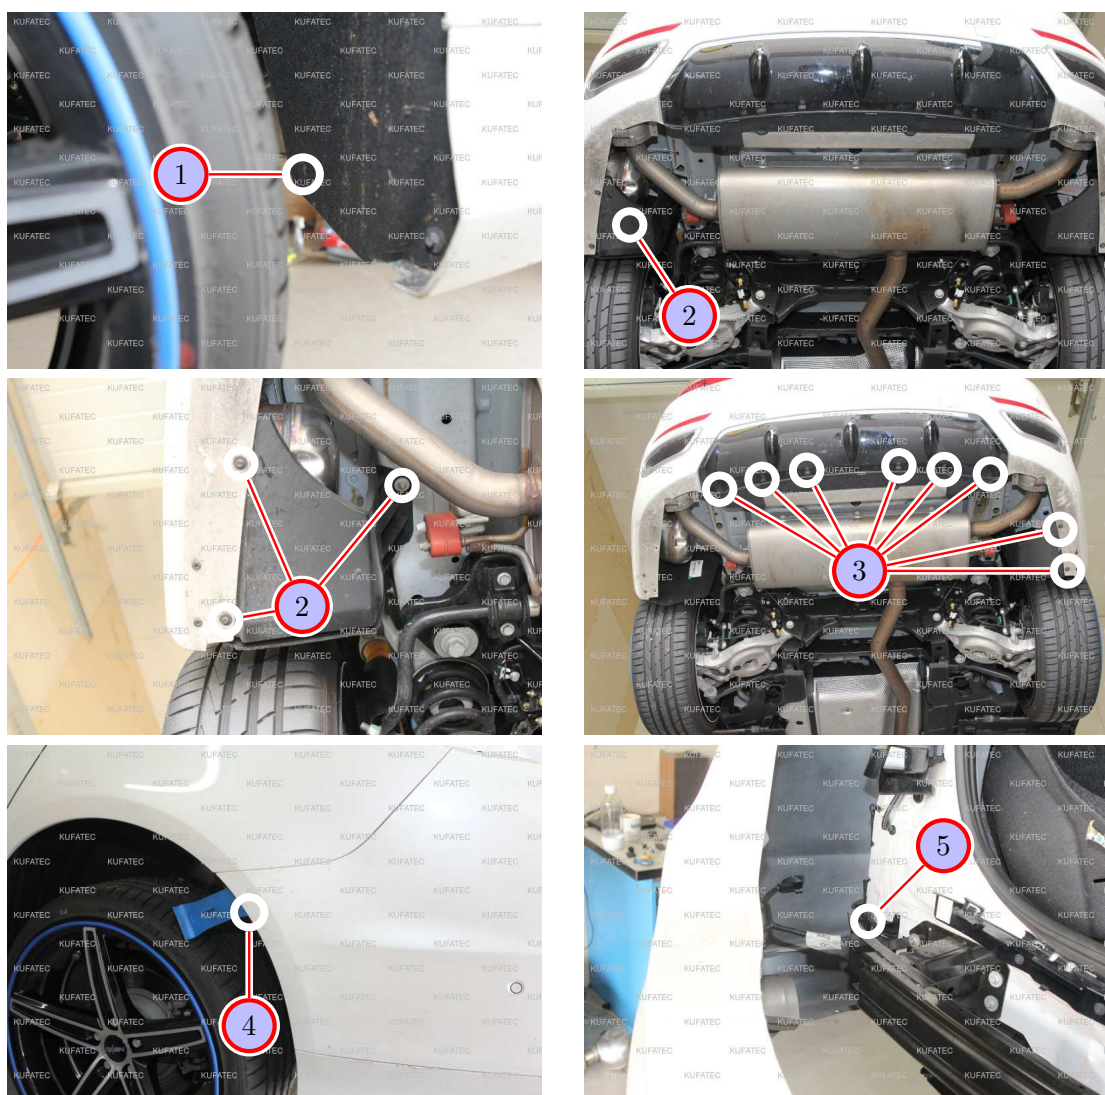


Figure 8: Removing rear bumper

Table 6: Removing rear bumper - instructions

Nr.	Work step	Note
1	Remove the marked plastic clip in the rear wheel housing of the driver's side.	
2	Remove the covering left rear at the underbody by loosening the three marked screws.	2x7er, 1x10er socket
3	Loosen the eight marked screws of the bumper at the underbody.	8x7er socket
4	Afterwards loosen the bumper from the vehicle with a trim tool.	
5	Remove the marked plug from the bumper and take the bumper off completely.	

15 Routing connecting cable sound generator

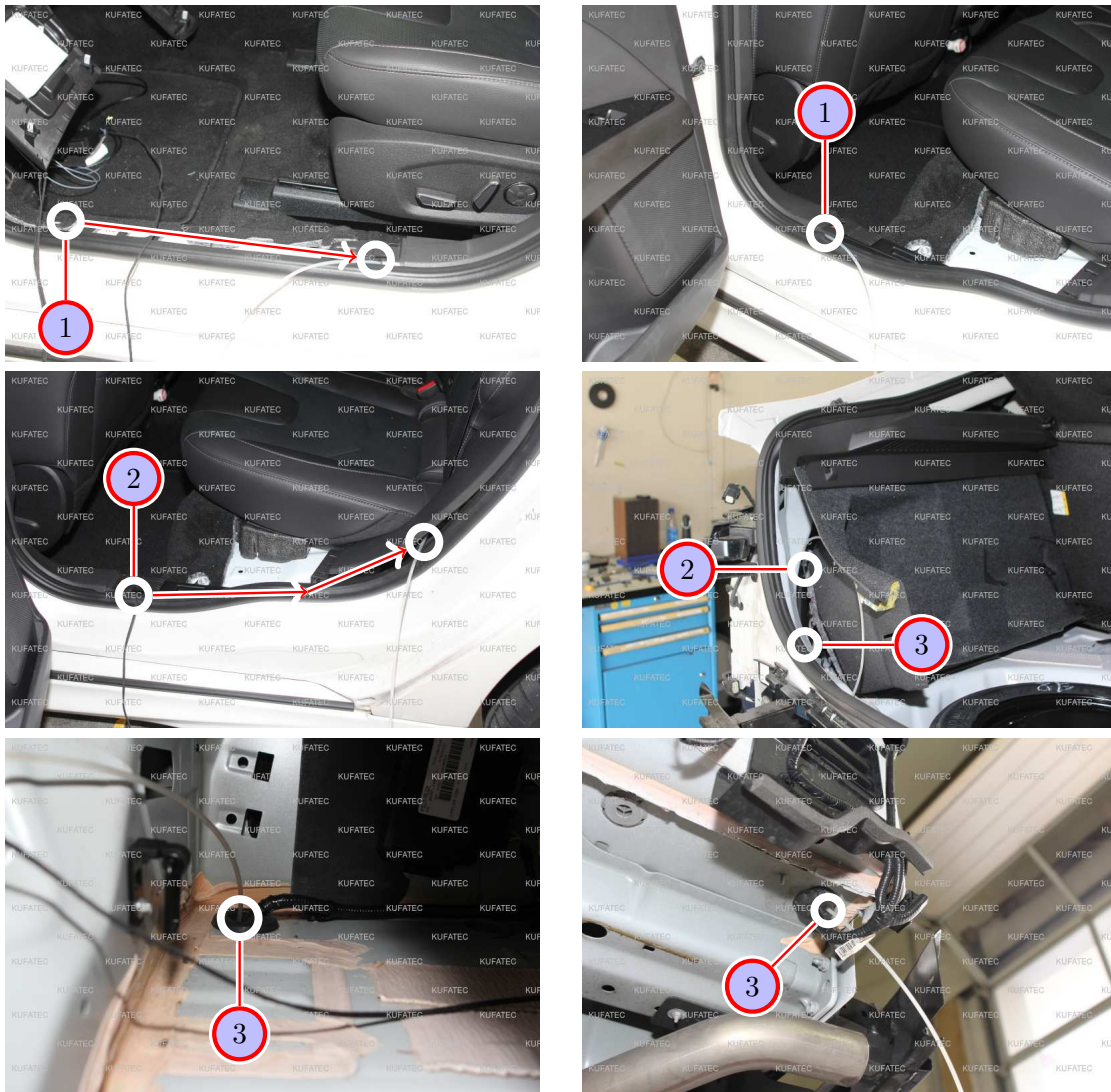


Figure 9: Routing connecting cable sound generator

Table 7: Routing connecting cable sound generator - instructions

Nr.	Work step	Note
1	Route the connecting cable for the sound generator along the front sill trim to the b-pillar and pull it, with a pull through aid, behind the trim panel of the b-pillar rearward.	
2	Now route the connecting cable along the rear sill trim and pull it with the pull through aid behind the trim panel into the trunk.	
3	Afterwards guide the cable through the marked grommet to the underbody.	

16 Installation sound generator

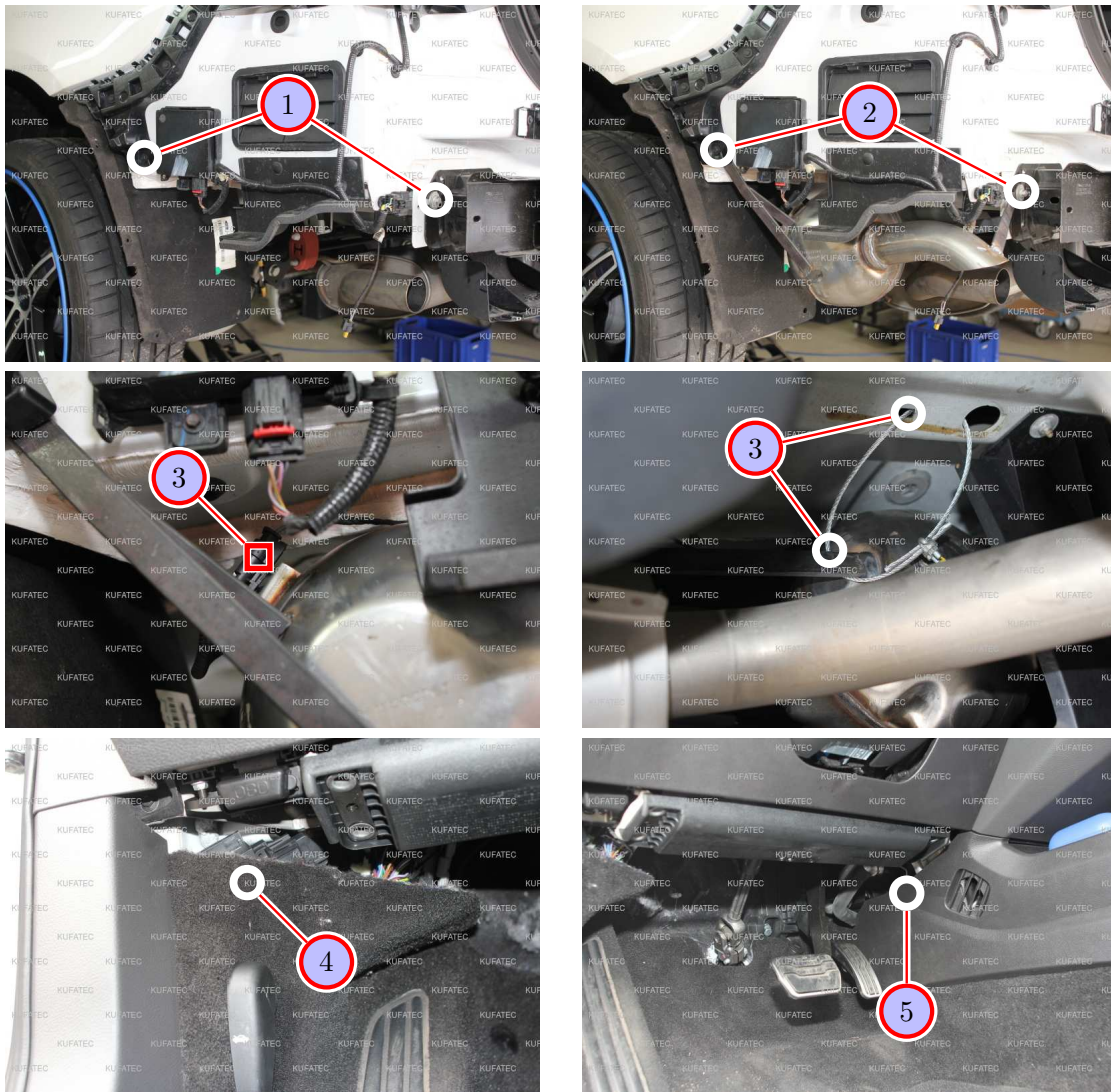


Figure 10: Installation sound generator

Table 8: Installation sound generator - instructions

Nr.	Work step	Note
1	Loosen the marked screw at the cross member as well as at the rail support.	1x10er, 1x8er socket
2	Afterwards install the sound generator with the just loosened screws.	1x10er, 1x8er socket
3	Connect the connecting cable to the sound generator and attach the delivered steel wire rope to the sound generator as well as to a suitable place at the vehicle.	
4	Now place the control unit as well as the module behind the carpet at the a-pillar of the driver's side.	
5	During our test installation, a pushbutton wasn't mounted. Choose a suitable position for the pushbutton, for example at the trim panel of the center console, drill a suitable hole and install the pushbutton afterwards.	7mm drill

17 Important Information Sound Booster

Please use for the fixation of the Sound Booster suitable high tensile screws. In order to avoid loosening of the screws by vibration please make the screws safe with appropriate factory material e.g Threadlock. Please additionally check the stability of the Sound Booster regularly and if necessary retighten the screws. In case of no consideration we do not assume liability for possible damages. After successful installation we recommend to cover the sound generator with a zinc spray. Make sure that you cover the opening of the sound generator so that no zinc spray can't get inside the sound generator.

As additional safety the delivered steel cable and the retaining clips have to be tightened on the Sound Booster as well as at a suitable position in the car. This safety cable is an additional security should the tightening screws should be released by vibration.

List of Figures

1	How to connect a cable to another	6
2	Cable Inscription	7
3	Vehicle overview	8
4	Removing front trim panel driver's side	9
5	Connection ignition lead / ground / CAN High & CAN Low	10
6	Removing rear trim panel	11
7	Removing rear lights / rear bumper	12
8	Removing rear bumper	13
9	Routing connecting cable sound generator	14
10	Installation sound generator	15

List of Tables

1	How to connect a cable to another	6
2	Removing front trim panel driver's side - instructions	9
3	Connection ignition lead / ground / CAN High & CAN Low - instructions	10
4	Removing rear trim panel - instructions	11
5	Removing rear lights / rear bumper - instructions	12
6	Removing rear bumper - instructions	13
7	Routing connecting cable sound generator - instructions	14
8	Installation sound generator - instructions	15